

Dashboard Center Panel Removal/Installation

NOTE:


- Put on gloves to protect your hands.
- Do not pry the panel surface with a flat-tip screwdriver, to prevent damage.
- Take care not to scratch the dashboard and related parts.

1. Remove these items:


- [Inner glove box](#)
- [Passenger's dashboard under cover](#)

2. Remove the screw (A). Detach the clips (B) and release the hooks (C) by pulling the center lower cover (D) down, by hand.**Fastener Locations**


A ► : Screw, 1 B ▷ : Clip, 2

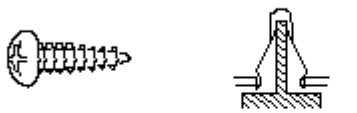


LHD:

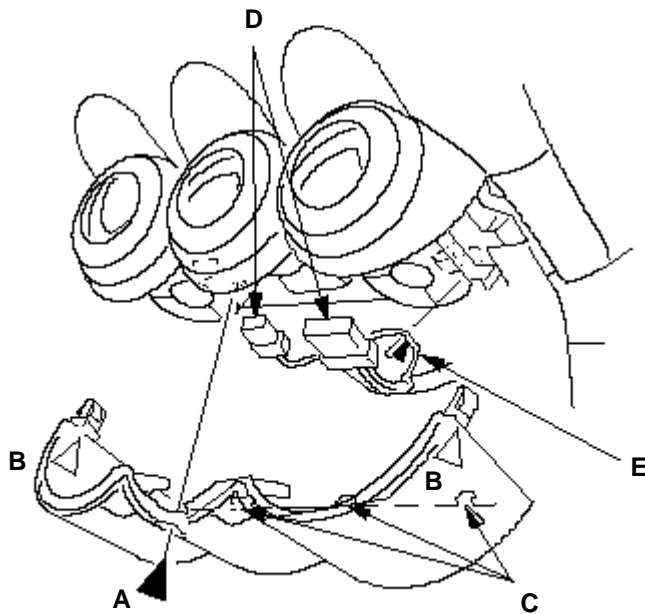

RHD:

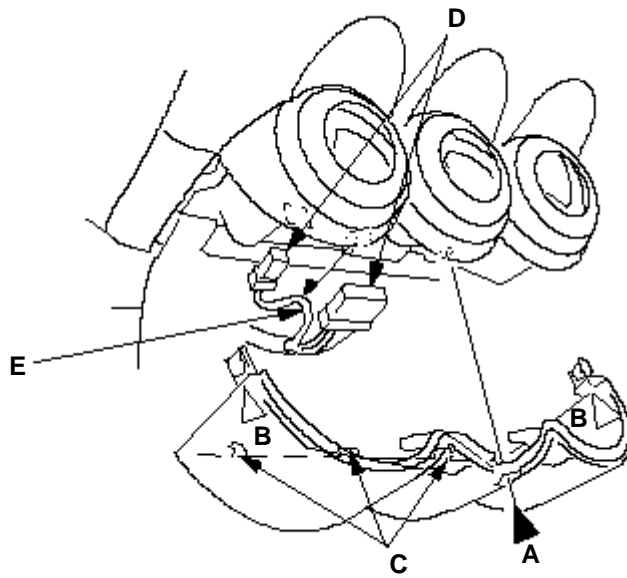

3. Disconnect the heater control unit connectors (D), and release the unit harness (E) from the clamp.
4. In the inner glove box opening, disconnect the recirculation control cable and the mode control cable (B), and from under the dashboard, disconnect the air mix control cable (C):
 - Take care not to bend any cables.
 - LHD is shown, RHD is symmetrical.

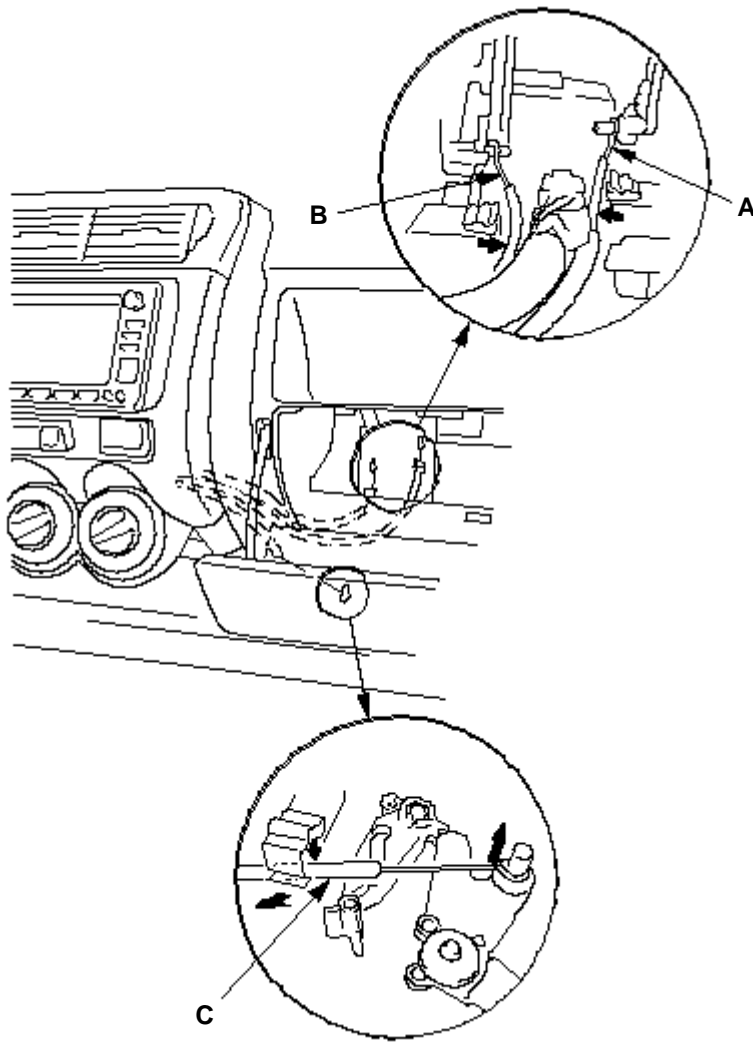

5. From the glove box and driver's dashboard lower cover openings, loosen the bolts securing the center panel (A).